

Owner's Manual

Beverage Center
ZDBG240



Monogram.®

Introduction

Your new Monogram beverage center makes an eloquent statement of style, convenience and kitchen planning flexibility. Whether you chose it for its purity of design or the assiduous attention to detail, you will find that your Monogram beverage center's superior blend of form and function will delight you for years to come.

The information on the following pages will help you operate and maintain your beverage center properly.

Contents

Built-In Dimensions	10	Operating Instructions	7
Care and Cleaning	8, 9	Problem Solver	Back Cover
Consumer Information	2, 3	Reversing the Door Swing	11
Controls and Features	6	Safety Instructions	4, 5
Model and Serial Numbers	2		

Before using your beverage center

Read this manual carefully. It is intended to help you operate and maintain your new beverage center properly.

Keep it handy for answers to your questions.

Write down the model & serial numbers

You will find them on a label on the ceiling inside the beverage center.

Please write these numbers here:

Model Number

Serial Number

Use these numbers in any correspondence or service calls concerning your beverage center.

ATTENTION CONSUMER!

This unit is designed for storing and cooling beverages. Do not store perishable foods in this unit.

Consumer Information

Beverage Center

*If you
received a
damaged
appliance*

The warranty does not cover damage caused after delivery.

Immediately contact the dealer (or builder) that sold you the beverage center.

*Remove
packaging*

Before using, be sure all packing materials and tape have been removed.

To assure no damage is done to the finish of the product, the safest way to remove the adhesive left from packaging tape on

new appliances is an application of household liquid detergent. Apply with a soft cloth and allow to soak. Wipe dry and then apply an appliance polish to thoroughly clean and protect the surface.

*After
installation
is completed*

- Promptly inspect your new Monogram Beverage Center. If it has been damaged, contact the Installer or Dealer immediately.
- This Beverage Center must be properly leveled to ensure correct door alignment and door closure. Contact the Installer if the unit is not level.
- The unit should be centered in the opening. The front face of the door should be 25 mm forward of adjacent cabinetry. Contact the installer if clearance is not correct.

- Test the door swing. Carefully open and close the door. The door should not rub or catch on adjacent cabinetry. Notify the installer if the door makes contact with cabinetry.

Please Contact the Installer or Dealer if you experience any of these problems.

Your Beverage Center is shipped with a black toekick on the front of the unit. For shipping purposes, an optional stainless steel toekick is secured to the back of the unit. That toekick should have been removed and installed, or given to you. Keep the unused toekick and other unused or removed parts for possible future use.

IMPORTANT SAFETY INSTRUCTIONS

READ AND SAVE THESE INSTRUCTIONS

▲WARNING: When using electrical appliances, basic safety precautions should be followed, including the following:

- Use this appliance only for its intended purpose as described in this Owner's Manual.
- This refrigerator must be properly installed in accordance with the Installation Instructions before it is used. Also see the How to Connect Electricity section.
- Do not allow children to climb, stand or hang on the shelves in the refrigerator. They could damage the refrigerator and seriously injure themselves.
- Do not store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance.
- Do not attempt to stand on top of the refrigerator. Doing so may result in bodily injury or damage to the refrigerator.
- Do not allow children to play with the refrigerator or tamper with the controls.
- Keep fingers out of the "pinch point" areas: clearances between the doors and between the doors and cabinet are necessarily small. Be careful closing doors when children are in the area.


- Unplug your refrigerator before cleaning and making repairs. **NOTE:** We strongly recommend that any servicing be performed by a qualified individual.
- Before replacing a burned-out light bulb, the refrigerator should be unplugged in order to avoid contact with a live wire filament. (A burned-out light bulb may break when being replaced.) **NOTE:** Setting the refrigerator temperature controls to **OFF** does not remove power to the light circuit.

This appliance has a refrigerating system filled with R600a (isobutane) refrigerant, so bear in mind:

- Leave servicing to an authorized expert.
- Be careful not to obstruct any air vents.
- Never use or store electric appliances in the refrigerator compartment.
- Never clean the appliance with sharp objects, as you may damage the refrigerating system.

▲WARNING: Do not use mechanical devices or other artificial means to accelerate the defrosting process, other than those recommended by the manufacturer.

▲DANGER: RISK OF CHILD ENTRAPMENT

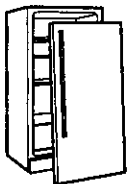

Child entrapment and suffocation are not problems of the past. Junked or abandoned refrigeration products are still dangerous... even if they will sit for "just a few days."

If you are getting rid of your old appliance, please follow these instructions to help prevent accidents.

Before You Throw Away Your Old Refrigeration Product:

- Take off the doors and discard separately.
- Leave the shelves in place so that children may not easily climb inside.
- If the refrigerator has a lock, make it unusable.

REFRIGERANTS

All refrigeration products contain refrigerants, which by law must be removed from the product and recovered for proper disposal by qualified technicians prior to product disposal.

If you are disposing of an old refrigeration product, check with the company handling the disposal about what to do.

IMPORTANT SAFETY INSTRUCTIONS

HOW TO CONNECT ELECTRICITY

Important: Always operate the appliance from a 230-240 Volt, 50Hz, Earthed (Grounded) 3 pin power outlet fully accessible when the appliance is located in its normal operating position.

If the appliance is built-in, we recommend the power outlet be positioned in an adjacent cupboard, etc., with access for the power cord and plug through a hole (large enough for the plug to fit through) in the lower back edge of the wall of the cupboard.

- Do **not** allow the cord to hang over the edge of a bench top where it may be grabbed by children or become entangled with a passer-by, resulting in possible personal injury and, or property damage.
- **Never** unplug an appliance by pulling on the power cord. Always grip the plug firmly and pull straight out from the power outlet.
- When moving the appliance, be careful not to roll over or damage the power cord.

Important: Do **not** operate the appliance with a damaged Supply cord or 3 pin Plug. If it is damaged, it **must** be replaced by the manufacturer, distributor or its service agent or a similarly qualified person in order to avoid a hazard. Special tools, or a special cord, are required to replace the Supply flexible cord of this appliance.

Close supervision is necessary when any electrical appliance is used or operated near children or infirm persons; young children should be supervised to ensure that they do not play with the appliance.

Use of power boards

WARNING: Avoid the use of multi-outlet power boards for powering this appliance. Plug the Cord of the appliance directly into a permanently wired fixed Earthed (Grounded) Power outlet.

Use of extension cords

WARNING: Avoid the use of extension cords. If it is necessary to use an extension cord, prior to its use, make sure the extension cord is safe to use, capable of handling the electrical load of the appliance (refer Product identification label) and has been checked and tested by your electricity supplier or qualified technician.

To avoid becoming entangled in the cord, **never** lay it through or along a walkway or thoroughfare.

SAVE THESE INSTRUCTIONS

Temperature control

Do not install the beverage center where the ambient temperature will go below 55°F (13°C) or above 90°F (32°C).

As with any refrigeration product, there is a slight temperature variance at different locations within the cabinet.


The coolest area will be in the lower part of the cabinet.

The cooler area will be in the middle section.

The upper part of the cabinet is the warmest section.

When the temperature is adjusted, allow 24 hours for the unit to stabilize.

To set the control, turn it to the midpoint setting (approximately 7°C). Once the beverage center is loaded, allow at least 24 hours before making any adjustments to the initial setting.

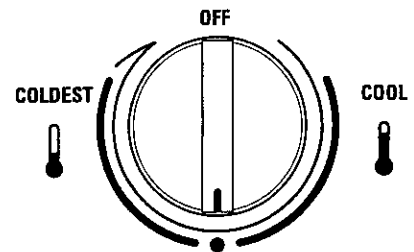

Interior light and switch

The interior light makes it easy to view your beverage labels and enhances the display of your collection.


When the switch is in the OFF position, the light comes on only when the door is opened. When the switch is in the ON position, the light remains on continuously for your maximum viewing pleasure. For best viewing, do not store a bottle on the top shelf directly under the light. Remember to turn off the light when it is no longer needed.

Glass shelves


Tempered glass shelves in the beverage center unit are removable for easy cleaning or for storing larger items.

To remove a shelf, open the door completely to avoid potential damage to the gasket. Lift up on the back of the shelf slightly. Tilt the shelf to one side at an angle while pulling forward.


To replace a shelf, open the door completely to avoid potential damage to the gasket. Tilt the shelf to one side at an angle and slide toward the back wall, placing one side onto the shelf support. Place the other side onto the opposite shelf support. Ensure rear locking tabs are engaged. When installed properly, the shelf will not slide forward when gently pulled.

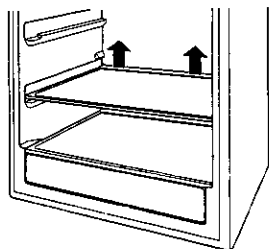

To remove, lift up on the back of the shelf

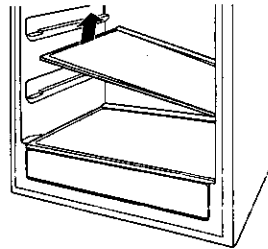

Tilt the shelf at an angle while removing or replacing

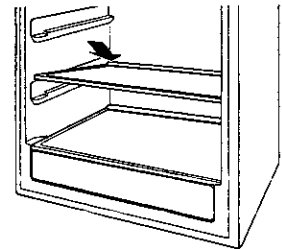


Place in slots when replacing the shelf

Loading tips and suggestions

The bottom two full extension drawers hold six bottles each and are loaded with necks facing the rear. Tall bottles should not be loaded on the bottom drawer because they may prevent the door from closing.

Do not allow children to climb, stand or hang on the beverage center shelves or full extension drawers. They could seriously injure themselves and possibly cause damage to the beverage center.

NOTE: This unit is for storing beverages only and not intended for the storage of perishable foods.

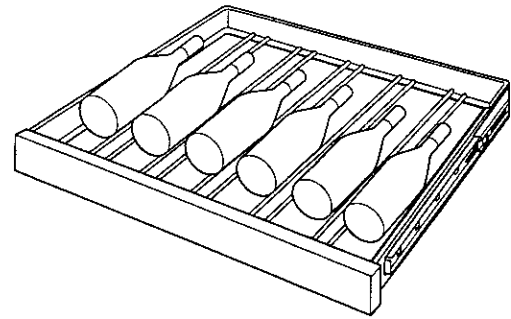

Bottom drawer arrangement

Removing full extension drawers

The bottom full extension drawers pull out so bottles can conveniently be added or removed.



The upper full extension slide can be removed for magnums or larger bottles.

To remove:


1. Pull the full extension drawer out to the STOP position.
2. Push the tab on right drawer guide down while pulling the tab on left guide up, and pull the drawer out.

To replace:

1. Push the drawer slide arm back into the unit.
2. Pull the small slide sub assembly completely forward.
3. Insert the sides of the drawer back into the guides.
4. Push until the tabs lock into place.

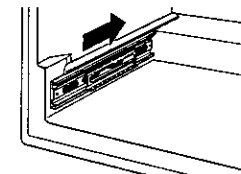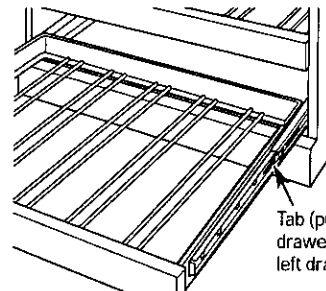

To replace, push drawer slide arm back into unit

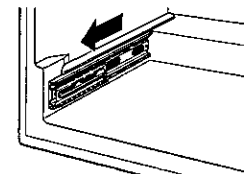

Pull small slide sub assembly completely forward

NOTE: Make sure the tabs on the full extension drawer guides are fully engaged before loading any bottles. Pull the drawers out all the way to the STOP position and push back in several times to make sure locking tabs are properly engaged.

Wood drawer fronts

The full extension drawer fronts on the beverage center are unfinished cherry wood. During use, oil from hands may accumulate and stain the wood.

- The drawer fronts may be stained and sealed to match adjacent cabinetry. The tinted glass will make the stained wood appear darker. A true color match can be seen only when the door is opened.

- Apply the stain and sealer according to the manufacturer's instructions. To avoid unpleasant odor, keep the door open to ventilate and allow the stain/sealer to dry completely before using the product.

NOTE: Natural wood may vary slightly in grain and color.

Unplug the beverage center before cleaning.

Cleaning the inside

Turn the beverage center unit **OFF** or **unplug the unit before cleaning**. Use a slightly damp cloth or sponge when cleaning around switches, lights or controls.

Use warm water and baking soda solution—about a tablespoon (15 ml) of baking soda to a quart (1 liter) of water. This both cleans and neutralizes odors. Thoroughly rinse and wipe dry.


Other parts of the beverage center unit—including the door gaskets, full extension drawers and glass shelves—can be cleaned the same way.

Avoid cleaning cold glass shelves with hot water because the extreme temperature difference may cause them to break. Handle glass shelves carefully. Rough handling of tempered glass can cause it to shatter.

Drain hole

Periodically check the drain hole and channel for any debris. If the drain is blocked, condensation will not drain properly.

To check and clean the drain hole, remove the bottom two glass shelves. Sweep a damp cloth along the channel in the back of the beverage center. Use a finger to sweep away any debris from the drain hole.

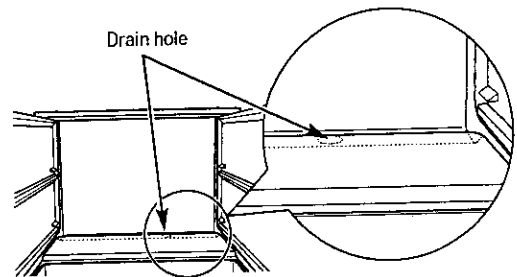

Cabinet

The exterior surfaces can be washed with mild soap and water. Rinse thoroughly with clear water. Never use abrasive scouring powders.

Glass door

Use a glass cleaner or mild soap and water and a soft cloth to clean the glass door. Do not use any abrasive powders.

Door gasket

The vinyl gasket may be cleaned with mild soap and water, a baking soda solution or a mild scouring powder. Rinse well.

After cleaning the door gasket, apply a thin layer of paraffin wax or petroleum jelly to the door gasket at the hinge side. This helps keep the gasket from sticking and bending out of shape.

Care and Cleaning

Beverage Center

Unplug the beverage center before cleaning.

Light bulb replacement

Unplug the beverage center before replacing the light bulb.

To remove the light shield, push in the tab on the left side of the shield and lower it. Replace with a 15 watt appliance bulb.

In the event of a power failure

If the power fails, open the door as infrequently as possible to maintain the temperature.


Do not store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance.

Built-In Dimensions

Beverage Center

Installation dimensions

The beverage center can be a free-standing model or can be built in using the cut-out dimensions below.

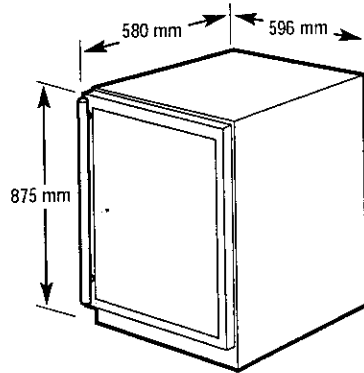


NOTE:

Handle and handle standoff depth is 45 mm

When building in the beverage center, be sure to allow for a full door swing so you have full access to the pull-out full extension drawers.

See the Installation Instructions for complete directions.

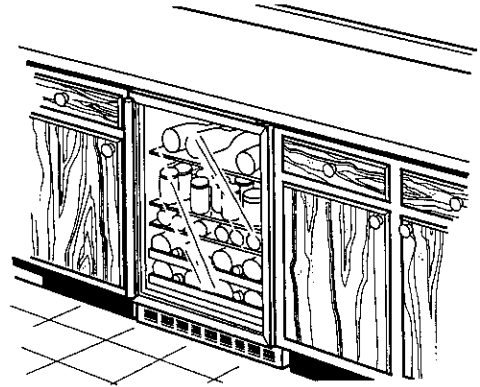

Cut-out dimensions:

Height: 875–890 mm

Width: 603 mm minimum

Depth: 610 mm minimum

Product clearances


The beverage center is factory set for a 110° door swing.

When installed in a corner:

- Allow 100 mm minimum clearance on the hinge side for the 90° door swing and to allow racks to slide out.
- Allow 360 mm minimum clearance on the hinge side for a full 110° door swing.
- The door swing is reversible on all models. If desired, change the door swing before installation.

Choose the location:

- These products may be closed in on the top and three sides as long as the front is unobstructed for air circulation and proper access to the door.
- Do not install these products where the temperature will go below 55°F (13°C) or above 90°F (32°C).
- Do not install where it will be subject to direct sunlight, heat or moisture.

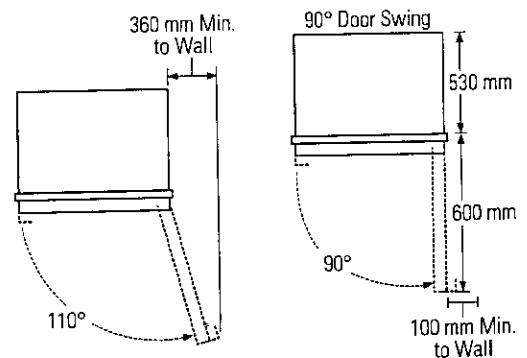

Black or Stainless Steel Toekick Options

These products are shipped with a black toekick installed. An optional stainless steel toekick is also supplied with each product. For shipping purposes, the stainless steel toekick is secured to the back of the unit.

Reversing the Door Swing

Beverage Center

*To reverse
the door*

Parts included:

1. Top left case hinge
2. Bottom left case hinge
3. Left and right side decorative hinge cover
4. Decorative hinge screw hole cover
5. Torx® driver bit

Tools required:

1. Phillips screwdriver
2. Electric drill

To remove the door:

1. Flatten the shipping carton to use as a pad.
2. Remove the 2 screws and the toekick. Set aside the screws and toekick for final installation.
3. Use the supplied Torx® bit and electric drill to remove the 3 screws holding the top case hinge. Lift off the hinge. (Screws will be used to install the new hinge.)
4. Lift the door off the bottom case hinge.
5. Remove the bottom case hinge pin and bracket.


Rotate the door:

The handle will be on the right side of the door; hinges will be installed on the left side of the case.


1. Remove the door stop and cam riser on the original bottom right side of the door.
2. Remove the fill plug on the top right side of the door.
3. Turn the door over and reinstall the fill plug on the new left side.

To reinstall the door:

1. Install the original door stop and cam riser onto the bottom left side of the door.
2. Install the new supplied bottom case hinge pin and bracket onto bottom left side.

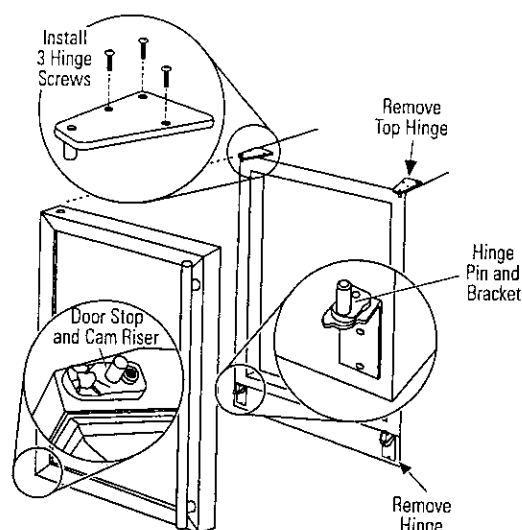

3. Place the door onto the bottom case hinge.
4. Install the supplied left-hand top case hinge with the 3 original screws.
5. Select the hinge cover marked with an "L".
6. Peel backing off the tape inside the decorative hinge cover.
7. Press and snap the hinge cover into place.
8. Snap the screw hole cover into place on the opposite side.

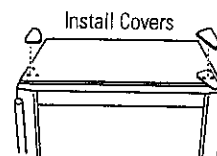

IMPORTANT: Check to be sure screws are tight and that the door is straight and does not sag. The door should swing freely.

NOTE: See Installation Instructions to apply hinge cover and screw hole cover.

Position nameplate:

Apply the Monogram nameplate on the door using the template included in the installation instructions.

The Problem Solver

Beverage Center

*Questions?
Use this
problem
solver!*

PROBLEM	POSSIBLE CAUSE
APPLIANCE DOES NOT OPERATE	<ul style="list-style-type: none"> • Appliance may be in defrost cycle when motor does not operate for about 30 minutes. • If interior light is not on, appliance may not be plugged in at wall outlet. Push the plug completely into the wall outlet. • The fuse is blown/circuit breaker is tripped. Replace fuse or reset the breaker.
VIBRATION OR RATTLING (Slight vibration is normal.)	<ul style="list-style-type: none"> • Adjust the leveling legs as shown in the Installation Instructions.
MOTOR OPERATES FOR LONG PERIODS OR CYCLES ON AND OFF FREQUENTLY	<ul style="list-style-type: none"> • Normal when appliance is first plugged in. Wait 24 hours for the appliance to completely cool down. • Often occurs when large amounts of beverages are placed in appliance. This is normal. • Door left open or package holding door open. • Hot weather or frequent door openings. This is normal. • Temperature control set at the coldest setting. See Temperature Control. Allow 24 hours for temperature to change.
COMPARTMENT TOO WARM	<ul style="list-style-type: none"> • Temperature control not set cold enough. See Temperature Control. Allow 24 hours for temperature to change. • Warm weather or frequent door openings. • Door left open for long time. • Package may be holding door open.
APPLIANCE HAS ODOR	<ul style="list-style-type: none"> • Interior needs cleaning. See Care and Cleaning. • Keep open box of baking soda in appliance; replace every 3 months.
DOOR NOT CLOSING PROPERLY	<ul style="list-style-type: none"> • Door gasket is sticking or folding over. Apply petroleum jelly or paraffin wax to the face of the gasket. • The door is hitting an internal component inside the appliance. Adjust interior components to prevent interference.
MOISTURE FORMS ON OUTSIDE OF APPLIANCE	<ul style="list-style-type: none"> • Not unusual during periods of high humidity. If bothersome, wipe surface dry; otherwise, moisture will evaporate in time. • Door left open or package holding door open.
FROST OR MOISTURE COLLECTS INSIDE	<ul style="list-style-type: none"> • Too frequent or too long door openings. • In humid weather, air carries moisture into appliance when door is opened. Unit will dissipate moisture in time. If bothersome, wipe surface dry. • Temperature control set at coldest setting.
INTERIOR LIGHT DOES NOT WORK	<ul style="list-style-type: none"> • No power at outlet. • Light bulb needs replacing. See Care and Cleaning.



Monogram®

GE Consumer & Industrial
Louisville, KY 40225

©2004 GE Company

NAV UPOR VC E AU en

Printed in Slovenia
118054 (08-04)

Installation Instructions

Wine Chiller
and
Beverage Center

Design Guide
With Installation Instructions



Monogram®

Safety Information

BEFORE YOU BEGIN:

Read these instructions completely and carefully.

IMPORTANT — Save these instructions for local inspector's use.

IMPORTANT — Observe all governing codes and ordinances.

Note to Installer — Be sure to leave these instructions with the Consumer.

Note to Consumer — Keep these instructions with your Owner's Manual for future reference.

WARNING — This appliance must be properly earthed. See "Electrical outlet installation", page 3.

If you received a damaged wine chiller or beverage center, you should immediately contact your dealer or builder.

Skill Level — Installation requires basic mechanical skills. Proper installation is the responsibility of the installer. Product failure due to improper installation is not covered under the Warranty.

WARNINGS:

- Use this appliance only for its intended purpose.
- Immediately replace Supply cord that has become damaged. Refer to "Important Safeguards", page 4.
- Unplug the unit before cleaning or making repairs.
- Repairs should be made by a qualified service technician.

CONTENTS

Design Guide

The Installation Space	3
Product Clearances	3
Side-by-Side Installation	3


Installation Instructions

Tools, Hardware	4
Grounding the Product	4
Staining Wood Drawer Fronts	4
Step 1, Remove Packaging	4
Step 2, Reverse Door Swing	5

Step 3, Leveling	6
Step 4, Connect Power	6
Step 5, Slide Product into Cutout	6
Step 6, Install Nameplate	6
Step 7, Set Temperature Controls	6
Template for Nameplate	Back Cover

Design Guide

THE INSTALLATION SPACE

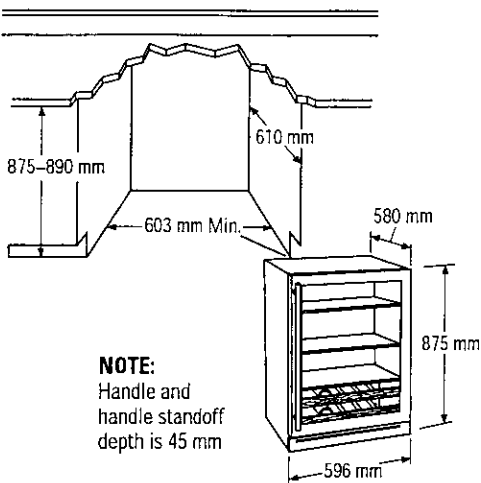

NOTE:
Handle and
handle standoff
depth is 45 mm

The cutout depth should be 600 mm

The cutout dimensions shown allow for a full door swing and access to the pull-out racks when installed as a built-in in standard 600 mm deep cabinets.

- The wine chiller and beverage center can be installed freestanding.
- If installing between frameless cabinets, a 13 mm wide filler strip or side panel may be needed on hinge side. The filler strip will act as a spacer between the case and adjacent cabinet door swing. The width of the opening must include the filler panels. **NOTE:** The door should protrude 25 mm beyond the surrounding cabinets.

Electrical outlet installation


For safe servicing of the appliance, we recommend an earthed (Grounded) 230-240 Volt 50Hz power outlet be positioned in an adjacent cupboard, etc., (or adjacent to the appliance) with access for the power cord and plug through a hole (large enough for the plug to fit through) in the lower back edge of the wall of the cupboard. This allows the appliance to be turned Off prior to removal for service or light bulb replacement.

PRODUCT CLEARANCES

The wine chiller and beverage center is factory set for a 110° door swing.

When installed in a corner:

- Allow 100 mm minimum clearance on the hinge side for the 90° door swing and to allow racks to slide out.
- Allow 360 mm minimum clearance on the hinge side for a full 110° door swing.

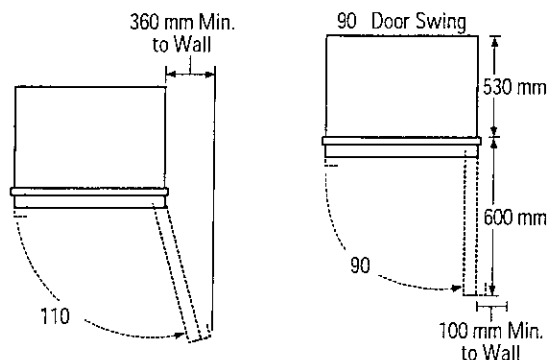

- The door swing is reversible on all models. If desired, change the door swing before installation.

Choose the location:

- These products may be closed in on the top and three sides as long as the front is unobstructed for air circulation and proper access to the door
- Do not install these products where the temperature will go below 55 F (13 C) or above 90 F (32 C).
- Do not install where it will be subject to direct sunlight, heat or moisture.

Black or Stainless Steel Toekick Options


- These products are shipped with a black toekick installed. An optional stainless steel toekick is also supplied with each product. For shipping purposes, the stainless steel toekick is secured to the back of the unit.

SIDE-BY-SIDE INSTALLATIONS

Increase storage capacity by installing two Monogram beverage centers or wine chillers together. Or, for a complete refreshment center, install any two of these units together.

- A side-by-side installation requires at least a 1206 mm wide opening. No trim kits required.
- Products must operate from separate outlets.

WARNING: Avoid the use of multi-outlet power boards for powering this appliance. Plug the cord of the appliance/s directly into a permanently wired fixed Earthed (grounded) Power Outlet/s.

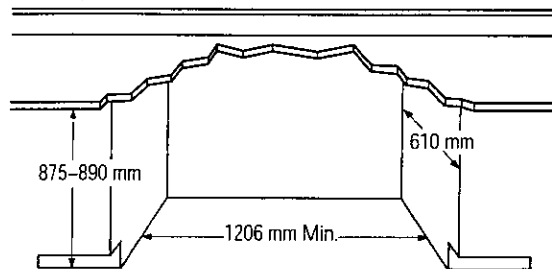

Installation Instructions

TOOLS REQUIRED

- #2 Phillips screwdriver
- Adjustable wrench

PARTS SUPPLIED

- Monogram nameplate
- Hardware for changing door swing
- Optional stainless steel toekick with screws and spacers
- Left and right side hinge covers
- Top screw hole cover

IMPORTANT SAFEGUARDS

Important: Always operate the appliance from a 230-240 Volt, 50Hz, Earthed (Grounded) 3 pin power outlet fully accessible when the appliance is located in its normal operating position.

Important: Do **not** operate the appliance with a damaged Supply cord or 3 pin Plug. If it is damaged, it **must** be replaced by the manufacturer, distributor or its service agent or a similarly qualified person in order to avoid a hazard. Special tools, or a special cord, are required to replace the Supply flexible cord of this appliance.

- **Do not** allow the cord to hang over the edge of a bench top where it may be grabbed by children or become entangled with a passer-by, resulting in possible personal injury and, or property damage.
- **Never** unplug an appliance by pulling on the power cord. Always grip the plug firmly and pull straight out from the power outlet.
- When moving the appliance, be careful not to roll over or damage the power cord.
- Close supervision is necessary when any electrical appliance is used or operated near children or infirm persons; young children should be supervised to ensure that they do not play with the appliance.

WARNING: Avoid the use of extension cords. If it is necessary to use an extension cord, prior to its use, make sure the extension cord is safe to use, capable of handling the electrical load of the appliance (refer Product identification label) and has been checked and tested by your electricity supplier or qualified technician.

- To avoid becoming entangled in the cord, **never** lay it through or along a walkway or thoroughfare."

STAINING WOOD DRAWER FRONTS

The drawer fronts are unfinished cherry wood. During use, oil from hands may accumulate and stain the wood.

- The drawer fronts may be stained and sealed to match adjacent cabinetry. The tinted glass will make the stained wood appear darker. A true color match can be seen only when the door is opened.
- Apply the stain and sealer according to the manufacturer's instructions. To avoid unpleasant odor, keep the door open to ventilate and allow the stain/sealer to dry completely before using the product.

STEP 1 REMOVE PACKAGING

- Remove corner blocks and foam drawer stops.
- Remove all packing material, tape and protective plastic coverings.
- Remove stainless steel toekick taped to the back of the unit.

CAUTION: Small objects are a choke hazard for children. Remove and discard any parts not used.

Installation Instructions

STEP 2 REVERSE DOOR SWING

SKIP THIS STEP IF DOOR SWING SUITS THE INSTALLATION

Parts Included:

- Top left case hinge
- Bottom left case hinge
- Left and right side decorative hinge cover
- Decorative hinge screw hole cover
- Torx® driver bit

Tools Required:

- Phillips screwdriver
- Electric drill

Remove the door:



- Flatten the shipping carton to use as a pad.
- Remove the 2 screws and the toekick. Set aside the screws and toekick for final installation.
- Use the supplied Torx® bit and electric drill to remove the 3 screws holding the top case hinge. Lift off the hinge. (Screws will be used to install the new hinge.)
- Lift the door off the bottom case hinge.
- Remove the bottom case hinge pin and bracket.

Rotate the door:

- The handle will be on the right side of the door; hinges will be installed on the left side of the case.
- Remove the door stop and cam riser on the original bottom right side of the door.
 - Remove the fill plug on the top right side of the door.
 - Turn the door over and reinstall the fill plug on the new left side.

Reinstall the door:

- Install the original door stop and cam riser onto the bottom left side of the door.
- Install the new supplied bottom case hinge pin and bracket onto bottom left side.
- Place the door onto the bottom case hinge.
- Install the supplied left-hand top case hinge with the 3 original screws.
- Select the hinge cover marked with an "L".
- Peel backing off the tape inside the decorative hinge cover.
- Press and snap the hinge cover into place.
- Snap the screw hole cover into place on the opposite side.

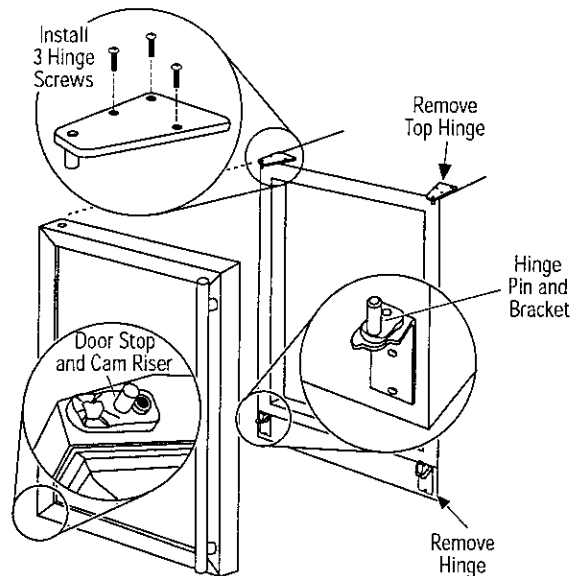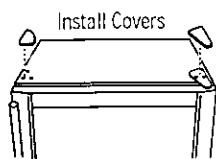


Apply Monogram Nameplate:

- Install the Monogram nameplate. See instructions and template on back cover.

Install Toekick

The toekick has a cutout on the left and right sides.

- Remove the plug on the left side and reinstall on the right side. If you choose to install the stainless steel toekick, reinstall the plug on the right side of that toekick.
- Install original screws and spacers or screws and spacers supplied with the stainless steel toekick. Install screws through the spacer standoff, toekick and into the base as shown.

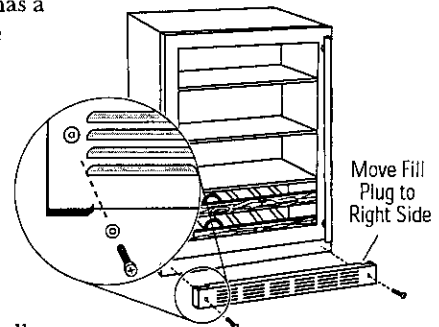


IMPORTANT: Check to be sure screws are tight and that the door is straight and does not sag. The door should swing freely.

Installation Instructions

STEP 3 LEVEL

- Use an adjustable wrench to turn the leveling legs and raise or lower the product.
- Adjust carefully; the product should be level and plumb with cabinetry, and should align with adjacent toekick height.

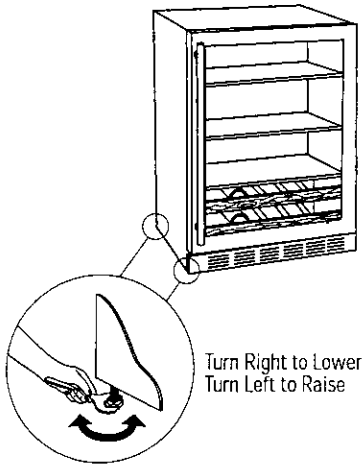

If you skipped Step 2:

- Select the hinge cover marked "R" or "L", depending on door swing.
- Peel backing off the tape inside the decorative hinge cover. Press and snap into position.
- Snap the screw hole cover into place on the opposite side.

STEP 4 CONNECT POWER

- Connect power cord plug to a properly grounded receptacle.
- Check to make sure power is on by opening the door to see if interior light turns on.

STEP 5 SLIDE PRODUCT INTO THE CUTOUT

- Carefully, slide the unit into the opening. Be careful not to entangle power cord.
- Make certain that the door protrudes 25 mm beyond the surrounding cabinets.
- Check again to be sure the unit is level.

STEP 6 INSTALL NAMEPLATE


If you skipped Step 2:

- Follow instructions on the back page for installation of the Monogram nameplate.

STEP 7 SET TEMPERATURE CONTROLS

- The temperature controls are preset. Refer to the Owner's Manual for more information. Allow 24 hours for temperature to stabilize.


TEMPLATE FOR NAMEPLATE LOCATION

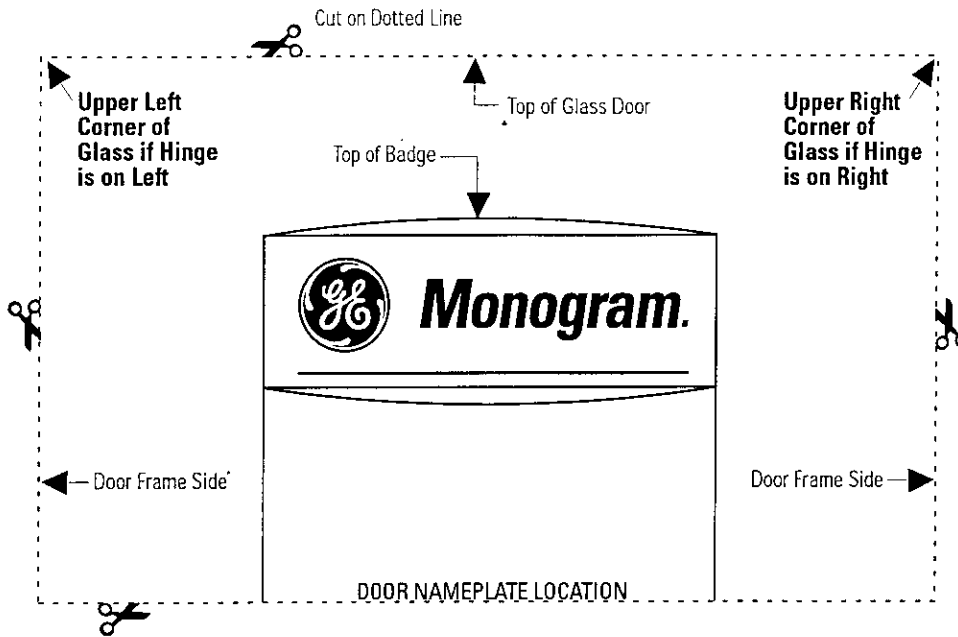

To position nameplate:

- Cut template along dotted line.
- Hold or tape template behind glass door so that it is visible from the front side.
- Remove backing from nameplate.
- Place nameplate onto front side of door, matching illustration on the template.

IMPORTANT: Nameplate must be placed on the opposite side of the door handle.

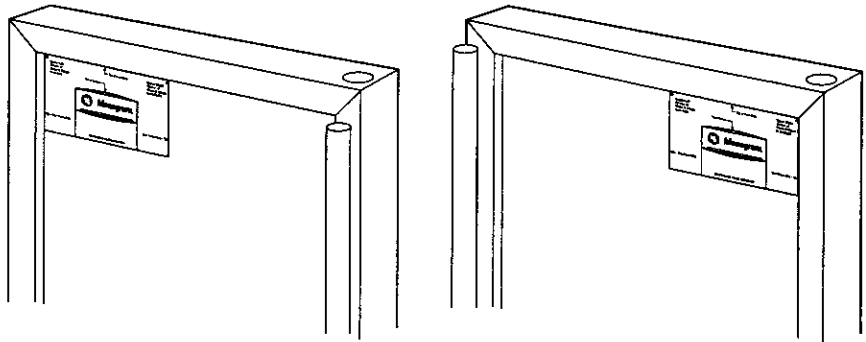

NOTE: While performing installations described in this book, safety glasses or goggles should be worn.

NOTE: Product improvement is a continuing endeavor at General Electric. Therefore, materials, appearance and specifications are subject to change without notice.



Monogram.

GE Consumer & Industrial
Louisville, KY 40225

©2004 GE Company